

Polifonik Melodiler:

Airam TSM340, Alcatel 535, Alcatel 735, Alcatel 756, Alcatel 156a, Alcatel 331a, Alcatel 735i, Alcatel OT556, Alcatel OT557, Alcatel OT565, Alcatel OT656, Alcatel OT-C552, Audiovox CDM 8600, Audiovox cdm 9500, Audiovox CDM-8450, Audiovox CDM-8900, Audiovox CDM-8910, Audiovox CDM-9900, BenQ M300, BenQ S660C, Blackberry 7100, Blackberry 7100t, Hitachi SH-P300, LG Electronics 1150, LG Electronics BD6070, LG Electronics BX4170, LG Electronics BX5450, LG Electronics BX6170 PrimeShot, LG Electronics BX7000, LG Electronics C1100, LG Electronics C1300, LG Electronics C2200, LG Electronics C3100, LG Electronics C3310, LG Electronics F7100, LG Electronics G1500, LG Electronics G1600, LG Electronics G1800, LG Electronics G3100, LG Electronics G4010, LG Electronics G4011, LG Electronics G4015, LG Electronics G4020, LG Electronics G4050, LG Electronics G5300i, LG Electronics G5350, LG Electronics G5400, LG Electronics G7000, LG Electronics G7050, LG Electronics G7070, LG Electronics G7100, LG Electronics G7200, LG Electronics L1100, LG Electronics L1200, LG Electronics L1400, LG Electronics L3100, LG Electronics L341i, LG Electronics L342i, LG Electronics MG105 (Vibecam), LG Electronics MG191, LG Electronics MG191a (Mini), LG Electronics MG200 (Smartcam), LG Electronics MG200d, LG Electronics MX200, LG Electronics MX500, LG Electronics T5100, LG Electronics U8110, LG Electronics U8120, LG Electronics U8130, LG Electronics U8150, LG Electronics U8210, LG Electronics U8290, LG Electronics VX-10, LG Electronics VX4400, LG Electronics VX4500, LG Electronics VX4600, LG Electronics VX6000, LG Electronics VX6100, LG Electronics VX7000, LG Electronics W3000, Maxon O2 X1, Mitsubishi Eclips, Mitsubishi m21i, Mitsubishi m222i, Mitsubishi M340i, Mitsubishi M341i, Mitsubishi M342i, Mitsubishi M430i, Motorola A760, Motorola A835, Motorola A840, Motorola A845, Motorola A925, Motorola C155, Motorola C222, Motorola C236, Motorola C236i, Motorola C330, Motorola C332, Motorola C333, Motorola C340, Motorola C343, Motorola C350, Motorola C350i, Motorola C353t, Motorola C355v, Motorola C357, Motorola C358, Motorola C370, Motorola C380, Motorola C381, Motorola C385, Motorola C390, Motorola C450, Motorola C550, Motorola C650, Motorola C698p, Motorola E1, Motorola E1000, Motorola E310, Motorola E365, Motorola E378i, Motorola E380, Motorola E398, Motorola MPx200, Motorola T720, Motorola T720c, Motorola T720i, Motorola T720PP, Motorola T721, Motorola T722i, Motorola T725, Motorola T730, Motorola T731, Motorola T732, Motorola V150, Motorola V171, Motorola V172, Motorola V180, Motorola V185, Motorola V186, Motorola V220, Motorola V260, Motorola V265, Motorola V3 RAZR, Motorola V300, Motorola V303, Motorola V360, Motorola V400, Motorola V400p, Motorola V500, Motorola V505, Motorola V510, Motorola V525, Motorola V525M, Motorola V530, Motorola V535, Motorola V545, Motorola V547, Motorola V550, Motorola V551, Motorola V555, Motorola V600, Motorola V620, Motorola V635, Motorola V710, Motorola V80, Motorola V810, Motorola V975, Motorola V980, NEC 515, NEC 525, NEC n21i, NEC n223i, NEC n22i, NEC n23i, NEC N331i, NEC n341i, NEC N342i, NEC n400i, NEC N401i, NEC n410i, NEC N411i, NEC N600i, Nokia 2270, Nokia 2280, Nokia 2300, Nokia 2650, Nokia 2651, Nokia 3100, Nokia 3105, Nokia 3108, Nokia 3120, Nokia 3125, Nokia 3200, Nokia 3205, Nokia 3220, Nokia 3230, Nokia 3300, Nokia 3510, Nokia 3520, Nokia 3530, Nokia 3560, Nokia 3585, Nokia 3586, Nokia 3590, Nokia 3595, Nokia 3600, Nokia 3620, Nokia 3650, Nokia 3660, Nokia 5100, Nokia 5140, Nokia 6010, Nokia 6012, Nokia 6016, Nokia 6020, Nokia 6021, Nokia 6030, Nokia 6100, Nokia 6101, Nokia 6108, Nokia 6170, Nokia 6200, Nokia 6220, Nokia 6225, Nokia 6225, Nokia 6230, Nokia 6255, Nokia 6260, Nokia 6560, Nokia 6585, Nokia 6600, Nokia 6610, Nokia 6620, Nokia 6630, Nokia 6651, Nokia 6670,

Nokia 6680, Nokia 6681, Nokia 6800, Nokia 6820, Nokia 6822, Nokia 7200, Nokia 7210, Nokia 7250, Nokia 7260, Nokia 7270, Nokia 7280, Nokia 7600, Nokia 7610, Nokia 7650, Nokia 7700, Nokia 7710, Nokia 8801, Nokia 9300, Nokia 9500, Nokia 3200B, Nokia 3510i, Nokia 3585i, Nokia 3586i, Nokia 3589i, Nokia 5140i, Nokia 6230i, Nokia 6255i, Nokia 6610i, Nokia 7250i, Nokia 8910i, Nokia N70, Nokia N90, Nokia N91, Nokia N-Gage, Nokia N-Gage QD, Palm One Treo 600, Palm One Treo 650, Panasonic A100, Panasonic A101, Panasonic A102, Panasonic G50, Panasonic G51, Panasonic G51e, Panasonic G51m, Panasonic G60, Panasonic G70, Panasonic GD50, Panasonic GD55, Panasonic GD60, Panasonic GD67, Panasonic GD68, Panasonic GD75, Panasonic GD87, Panasonic GD88, Panasonic GU87, Panasonic P341i, Panasonic X100, Panasonic X300, Panasonic X400, Panasonic X500, Panasonic X60, Panasonic X66, Panasonic X70, Panasonic X700, Panasonic X701, Pantech G310, Pantech G500, Pantech G510, Pantech G700, Pantech GB200, Pantech GB210, Pantech GB300, Pantech GB310, Philips 350, Philips 355, Philips 535, Philips 568, Philips Fisio 822, Philips Fisio 825, QTEK 8010, QTEK 9090, Sagem My 3052, Sagem MyC-2, Sagem MyC-3b, Sagem MyC4-2, Sagem MyV-55, Sagem MyV-56, Sagem MyV-65, Sagem MyV-75, Sagem myV-76, Sagem MyX1-2, Sagem MyX-2, Sagem MyX2-2m, Sagem MyX-2a, Sagem MyX-2G, Sagem MyX3-2, Sagem myX-5, Sagem MyX5-2, Sagem myX55, Sagem MyX-5m, Sagem MyX-6, Sagem MyX-7, Sagem myZ-5, Sagem SG322i, Sagem SG341i, Samsung SCH-A530s, Samsung SCH-A565, Samsung SCH-A605, Samsung SCH-A610, Samsung SCH-A650, Samsung SCH-A655, Samsung SCH-A670, Samsung SCH-A685, Samsung SCH-A725, Samsung SCH-A790, Samsung SCH-A815, Samsung SCH-A840, Samsung SCH-A845, Samsung SCH-A895, Samsung SCH-N195, Samsung SCH-N345, Samsung SCH-N395, Samsung SCH-N415 (Bravo), Samsung SCH-N480, Samsung SGH-341i, Samsung SGH-A500, Samsung SGH-A800, Samsung SGH-C100, Samsung SGH-C110, Samsung SGH-C200, Samsung SGH-C207, Samsung SGH-C225, Samsung SGH-D410, Samsung SGH-D415, Samsung SGH-D500, Samsung SGH-D600, Samsung SGH-E100, Samsung SGH-E105, Samsung SGH-E300, Samsung SGH-E310, Samsung SGH-E315, Samsung SGH-E316, Samsung SGH-E320, Samsung SGH-E330, Samsung SGH-E600, Samsung SGH-E630, Samsung SGH-E700, Samsung SGH-E710, Samsung SGH-E715, Samsung SGH-E720, Samsung SGH-E800, Samsung SGH-E808, Samsung SGH-E810, Samsung SGH-E820, Samsung SGH-E850, Samsung SGH-N400, Samsung SGH-P100, Samsung SGH-P107, Samsung SGH-P400, Samsung SGH-P510, Samsung SGH-P730, Samsung SGH-S100, Samsung SGH-S105, Samsung SGH-S200, Samsung SGH-S300, Samsung SGH-S300M, Samsung SGH-S307, Samsung SGH-S342i, Samsung SGH-S410i, Samsung SGH-S500, Samsung SGH-T100, Samsung SGH-T400, Samsung SGH-T500, Samsung SGH-V200, Samsung SGH-V205, Samsung SGH-V206, Samsung SGH-X100, Samsung SGH-X105, Samsung SGH-X120, Samsung SGH-X140, Samsung SGH-X400, Samsung SGH-X426, Samsung SGH-X427, Samsung SGH-X430, Samsung SGH-X450, Samsung SGH-X460, Samsung SGH-X480, Samsung SGH-X486, Samsung SGH-X495, Samsung SGH-X600, Samsung SGH-X640, Samsung SGH-Z100, Samsung SGH-Z105, Samsung SGH-Z107, Samsung SGH-Z130, Samsung SGH-Z140, Samsung SGH-Z140V, Samsung SGH-Z300, Samsung SGH-Z500, Samsung SPH-A500, Samsung SPH-A505, Samsung SPH-A600, Samsung SPH-A620, Samsung SPH-A660, Samsung SPH-A680, Samsung SPH-A700, Samsung SPH-N400, Samsung STH-A325, Samsung VGA1000, Sanyo RL-4920, Sanyo RL-7300, Sanyo SCP-4900, Sanyo SCP-5300, Sanyo SCP-5400, Sanyo SCP-6400, Sanyo SCP-7200, Sanyo SCP-8100, Sanyo SCP-8200, Sanyo VM4500, Sendo M550, Sendo M570, Sendo P600, Sendo S1, Sendo S360, Sendo S600, Sendo SV663, Sendo X, Sharp 902SH, Sharp GX10, Sharp GX10i, Sharp GX15 (GZ100), Sharp GX20, Sharp GX25 (GZ200), Sharp GX30, Sharp GX30i, Sharp GZ100, Sharp GZ200, Sharp TM100, Sharp TM150, Sharp V902, Siemens A52, Siemens A53, Siemens A55, Siemens A56, Siemens A56i, Siemens A57, Siemens A60, Siemens A62,

Siemens A65, Siemens A70, Siemens C55, Siemens C56, Siemens C60, Siemens C61, Siemens C62, Siemens C65, Siemens C66, Siemens CF62, Siemens CFX65, Siemens CT56, Siemens CV65, Siemens CV66, Siemens CX65, Siemens CX70, Siemens CX75, Siemens CXT65, Siemens CXV65, Siemens M55, Siemens M56, Siemens M65, Siemens MC60, Siemens S55, Siemens S56, Siemens S65, Siemens SI 400i, Siemens SK65, Siemens SL55, Siemens SL56, Siemens SL65, Siemens ST55, Siemens ST60, Siemens SX1, SonyEricsson D750i, SonyEricsson F500i, SonyEricsson J200i, SonyEricsson J300, SonyEricsson K300a, SonyEricsson K300i, SonyEricsson K500i, SonyEricsson K508i, SonyEricsson K600i, SonyEricsson K608, SonyEricsson K700, SonyEricsson K700i, SonyEricsson K750i, SonyEricsson P800, SonyEricsson P900, SonyEricsson P910, SonyEricsson P910i, SonyEricsson S700, SonyEricsson S700i, SonyEricsson T226, SonyEricsson T230, SonyEricsson T237, SonyEricsson T290i, SonyEricsson T300, SonyEricsson T306, SonyEricsson T310, SonyEricsson T316, SonyEricsson T508, SonyEricsson T610, SonyEricsson T616, SonyEricsson T630, SonyEricsson T637, SonyEricsson V600i, SonyEricsson V800, SonyEricsson W550i, SonyEricsson W600i, SonyEricsson W800, SonyEricsson Z1010, SonyEricsson Z200, SonyEricsson Z500, SonyEricsson Z520, SonyEricsson Z600, SonyEricsson Z608, SonyEricsson Z800i, Toshiba TS21i, Toshiba TS222i, Toshiba TS921, Toshiba VM-4050, Vitelcom TSM 30i, Vitelcom TSM100, Vitelcom TSM100v, Vitelcom TSM-30, Vitelcom TSM-342, Vitelcom TSM5, Vitelcom TSM500, Vitelcom TSM520, Vitelcom TSM5m, Vitelcom TSM5m-t, Vitelcom TSM-6, Vitelcom TSM-7, Vitelcom TSM-7 Slider (G402i)

Gerçek Sesler:

Alcatel 756, Alcatel OT556, Alcatel OT557, Alcatel OT565, Alcatel OT656, Alcatel OT-C552, BenQ M300, BenQ S660C, BenQ S82, Gradiente Concept (GX-2), Gradiente Partner (GP200), Huawei U526, Kyocera KE414, Kyocera KX1, Kyocera KX2, Kyocera KX414, Kyocera KX414c, Kyocera KX424, Kyocera KX424c, Kyocera KX440, Kyocera KX444, Kyocera SE44, LG Electronics BX4170, LG Electronics BX5450, LG Electronics BX6170 PrimeShot, LG Electronics BX7000, LG Electronics C1300, LG Electronics C3310, LG Electronics G1800, LG Electronics G4010, LG Electronics G4011, LG Electronics G4015, LG Electronics G4020, LG Electronics G4050, LG Electronics G7200, LG Electronics L1200, LG Electronics L341i, LG Electronics L342i, LG Electronics MX200, LG Electronics MX500, LG Electronics S5200, LG Electronics T5100, LG Electronics U8110, LG Electronics U8120, LG Electronics U8130, LG Electronics U8150, LG Electronics U8210, LG Electronics U8290, LG Electronics VX6000, LG Electronics W3000, Mitsubishi M342i, Mitsubishi M430i, Motorola A760, Motorola A840, Motorola A845, Motorola A925, Motorola C357, Motorola C358, Motorola C380, Motorola C381, Motorola C385, Motorola C390, Motorola C650, Motorola C698p, Motorola C975, Motorola E1, Motorola E1000, Motorola E310, Motorola E398, Motorola E770v, Motorola V1050, Motorola V180, Motorola V185, Motorola V186, Motorola V220, Motorola V260, Motorola V265, Motorola V3 RAZR, Motorola V300, Motorola V303, Motorola V360, Motorola V400, Motorola V400p, Motorola V500, Motorola V505, Motorola V510, Motorola V525, Motorola V525M, Motorola V530, Motorola V535, Motorola V545, Motorola V547, Motorola V550, Motorola V551, Motorola V555, Motorola V600, Motorola V620, Motorola V635, Motorola V710, Motorola V80, Motorola V810, Motorola V975, Motorola V980, NEC 515, NEC 525, NEC N331i, NEC n400i, NEC N401i, NEC n410i, NEC N411i, NEC N600i, Nokia 2650, Nokia 3105, Nokia 3125, Nokia 3200, Nokia 3205, Nokia 3220, Nokia 3230, Nokia 3300, Nokia 3600, Nokia 3620, Nokia 3650, Nokia 3660, Nokia 5140, Nokia 6020, Nokia 6021, Nokia 6030, Nokia 6101, Nokia 6170, Nokia 6220, Nokia 6230,

Nokia 6255, Nokia 6260, Nokia 6600, Nokia 6620, Nokia 6630, Nokia 6650, Nokia 6670, Nokia 6680, Nokia 6681, Nokia 6810, Nokia 6820, Nokia 6822, Nokia 7200, Nokia 7260, Nokia 7270, Nokia 7280, Nokia 7600, Nokia 7610, Nokia 7650, Nokia 7700, Nokia 7710, Nokia 8800, Nokia 8801, Nokia 9300, Nokia 9500, Nokia 3200B, Nokia 5140i, Nokia 6230i, Nokia 6255i, Nokia N70, Nokia N90, Nokia N91, Nokia N-Gage, Nokia N-Gage QD, Palm One Treo 600, Palm One Treo 650, Panasonic G50, Panasonic G51, Panasonic G51e, Panasonic G51m, Panasonic G70, Panasonic GD50, Panasonic GD87, Panasonic P341i, Panasonic VS3, Panasonic X300, Panasonic X400, Panasonic X500, Panasonic X60, Panasonic X66, Panasonic X70, Panasonic X700, Panasonic X701, Pantech G310, Pantech G500, Pantech G510, Pantech G700, Pantech GB200, Pantech GB210, Pantech GB300, Pantech GB310, Philips 350, Philips 355, Philips 568, Sagem MyC2-2, Sagem MyC2-3, Sagem MyC3-2, Sagem MyC-3b, Sagem MyC-4, Sagem MyC4-2, Sagem myC5-2, Sagem MyC5-2T, Sagem MyC-5w, Sagem MyG-5, Sagem MyV-55, Sagem MyV-56, Sagem MyV-65, Sagem MyV-75, Sagem MyX-2, Sagem MyX2-2, Sagem MyX2-2m, Sagem MyX-3d, Sagem MyX-4, Sagem MyX-4T, Sagem myX-5, Sagem MyX5-2, Sagem MyX5-2T, Sagem myX55, Sagem MyX-5d, Sagem MyX-5m, Sagem MyX6-2, Sagem MyX-7, Sagem MyX-8, Sagem MyX-T, Sagem MyZ-3, Sagem myZ-5, Sagem SG321i, Sagem SG341i, Sagem SG342i, Sagem SG343i, Sagem SG344i, Samsung SCH-A725, Samsung SCH-A815, Samsung SCH-A840, Samsung SCH-A895, Samsung SCH-N395, Samsung SCH-N480, Samsung SGH-341i, Samsung SGH-A500, Samsung SGH-C100, Samsung SGH-C110, Samsung SGH-C200, Samsung SGH-C207, Samsung SGH-C225, Samsung SGH-D410, Samsung SGH-D415, Samsung SGH-D500, Samsung SGH-D500E, Samsung SGH-D600, Samsung SGH-E100, Samsung SGH-E105, Samsung SGH-E300, Samsung SGH-E310, Samsung SGH-E315, Samsung SGH-E316, Samsung SGH-E320, Samsung SGH-E330, Samsung SGH-E350, Samsung SGH-E530, Samsung SGH-E600, Samsung SGH-E620, Samsung SGH-E630, Samsung SGH-E700, Samsung SGH-E710, Samsung SGH-E715, Samsung SGH-E720, Samsung SGH-E730, Samsung SGH-E800, Samsung SGH-E808, Samsung SGH-E810, Samsung SGH-E820, Samsung SGH-E850, Samsung SGH-E860v, Samsung SGH-E880, Samsung SGH-P100, Samsung SGH-P107, Samsung SGH-P510, Samsung SGH-P730, Samsung SGH-S105, Samsung SGH-S200, Samsung SGH-S307, Samsung SGH-S342i, Samsung SGH-S410i, Samsung SGH-T100, Samsung SGH-T400, Samsung SGH-T500, Samsung SGH-V205, Samsung SGH-V206, Samsung SGH-X105, Samsung SGH-X120, Samsung SGH-X140, Samsung SGH-X400, Samsung SGH-X426, Samsung SGH-X427, Samsung SGH-X430, Samsung SGH-X450, Samsung SGH-X460, Samsung SGH-X480, Samsung SGH-X495, Samsung SGH-X600, Samsung SGH-X640, Samsung SGH-Z100, Samsung SGH-Z105, Samsung SGH-Z107, Samsung SGH-Z130, Samsung SGH-Z140, Samsung SGH-Z140V, Samsung SGH-Z300, Samsung SGH-Z500, Samsung SPH-A500, Samsung SPH-A700, Samsung SSH-E340, Samsung STH-A325, Sanyo S750, Sendo M550, Sendo M570, Sendo S600, Sendo SV663, Sendo X, Sharp 703SH, Sharp 902SH, Sharp 903SH, Sharp GX10, Sharp GX10i, Sharp GX15 (GZ100), Sharp GX20, Sharp GX25 (GZ200), Sharp GX30, Sharp GX30i, Sharp GZ100, Sharp GZ200, Sharp TM100, Sharp TM150, Sharp V802, Sharp V902, Siemens C65, Siemens C66, Siemens C72, Siemens C75, Siemens CFX65, Siemens CV65, Siemens CV66, Siemens CX65, Siemens CX70, Siemens CX75, Siemens CXT65, Siemens CXV65, Siemens M65, Siemens MC60, Siemens S55, Siemens S65, Siemens SI 400i, Siemens SK65, Siemens SL55, Siemens SL65, Siemens ST55, Siemens ST60, Siemens SX1, SonyEricsson D750i, SonyEricsson F500i, SonyEricsson J200i, SonyEricsson J300, SonyEricsson K300a, SonyEricsson K300i, SonyEricsson K500i, SonyEricsson K508i, SonyEricsson K600i, SonyEricsson K608, SonyEricsson K700, SonyEricsson K700i, SonyEricsson K750i, SonyEricsson P800, SonyEricsson P900, SonyEricsson P910, SonyEricsson P910i, SonyEricsson S700, SonyEricsson S700i, SonyEricsson V600i, SonyEricsson V800, SonyEricsson W550i,

SonyEricsson W600i, SonyEricsson W800, SonyEricsson Z1010, SonyEricsson Z200, SonyEricsson Z500, SonyEricsson Z520, SonyEricsson Z800i, Toshiba 803, Toshiba TS921, Vitelcom TSM-30, Vitelcom TSM500, Vitelcom TSM520, Vitelcom TSM-6, Vitelcom TSM-7, Vitelcom TSM-7 Slider (G402i), Wonu S1, Wonu S3